


# MODEL 601 INSTRUCTIONS FOR OPERATION.



INPUT SHOULD BE 240V AC 50Hz.  
OUTPUT SHOULD BE BETWEEN 8V  
AND 20V (IDEALLY 12V-15V) AND  
CURRENT OF MORE THAN 750mA

**IMPORTANT.  
KEEP ISOLATED.**  
THE OUTPUT MUST **NOT** BE  
CONNECTED TO THE INPUT OR  
DAMAGE MAY RESULT.

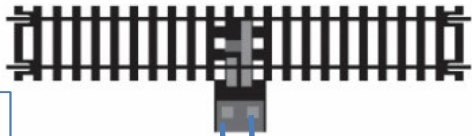

INPUT IS NOT POLARISED. CONNECT  
EITHER WAY ROUND.

WILL FLASH IF TRANSMITTING  
BLUETOOTH ADVERTISING PACKETS.  
ON IF BLUETOOTH IS CONNECTED.

ON IF DC POWER IS CONNECTED.

KNOB CONTROLS OUTPUT TO THE  
TRACK IN LOCAL MODE ONLY.

ON IF OUTPUT IS CONTROLLER BY A  
REMOTE DEVICE I.E. SMARTPHONE.  
WILL FLASH IF IN LOCAL CONTROL  
AND REQUIRES ZEROING OF THE  
KNOB AFTER CHANGING DIRECTION.

INTENSITY WILL REFLECT THE  
OUTPUT VOLTAGE TO THE TRACK.

CENTER TO ENABLE REMOTE CONTROL.  
FWD OR REV ENABLES LOCAL CONTROL.

